



# IBM Thinkpad T61 Trackpad Replacement

This guide will show how to replace the Track pad

Written By: Raymond Lawton





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Trackpad Replacement



- This image shows the track pad which is going to be replaced.

## Step 2



- Remove the screws with the PH1 bit.





## Step 3






- With the screws removed, the top part of the keyboard should lift as shown.

## Step 4

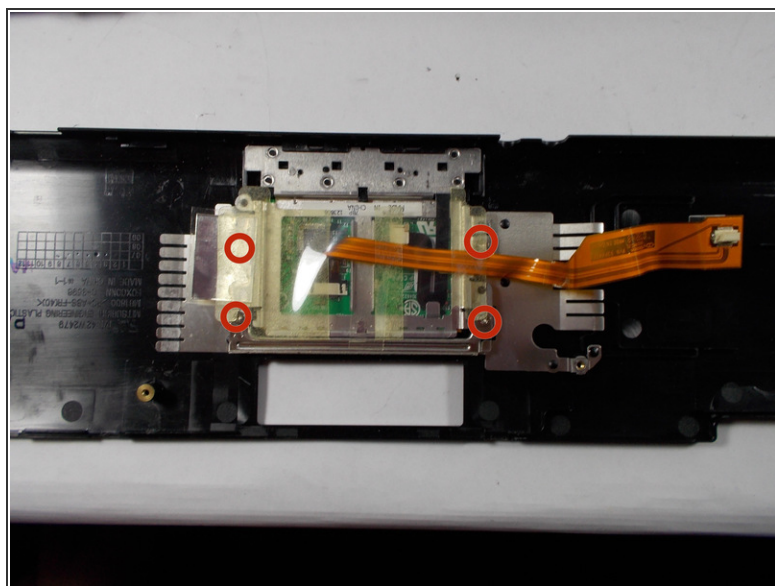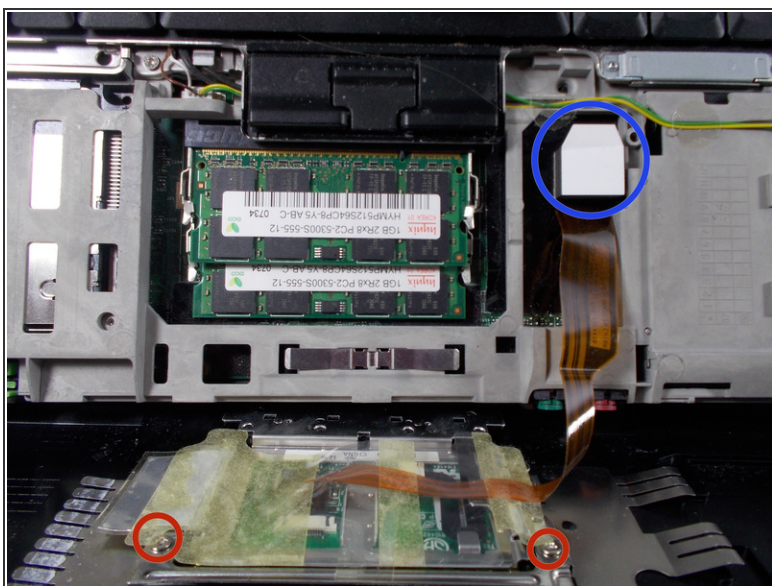


- Remove plug
- Use a Philips head screwdriver to remove the screws. Two of the screws are located just under the plastic.

## Step 5

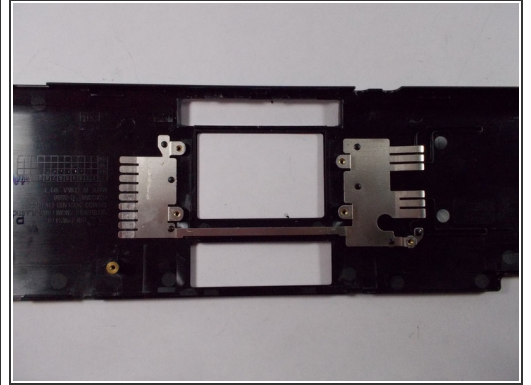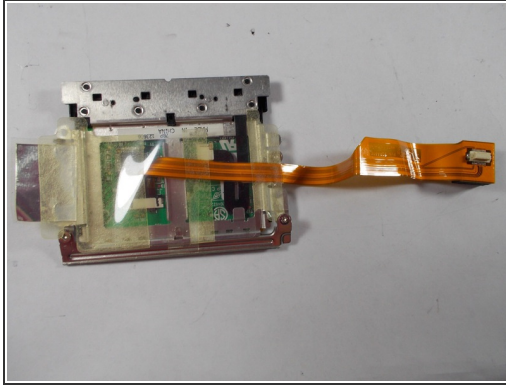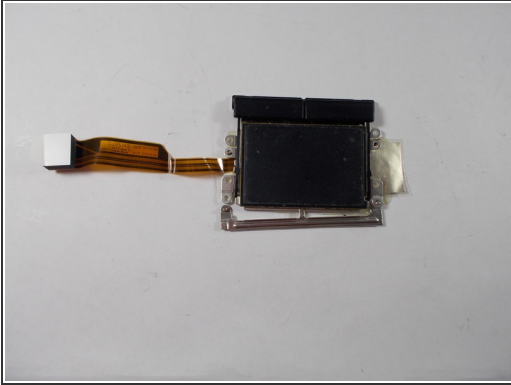

- Once the screws have been removed, the touch pad, and bottom mouse buttons should be ready to replace.


## Step 6

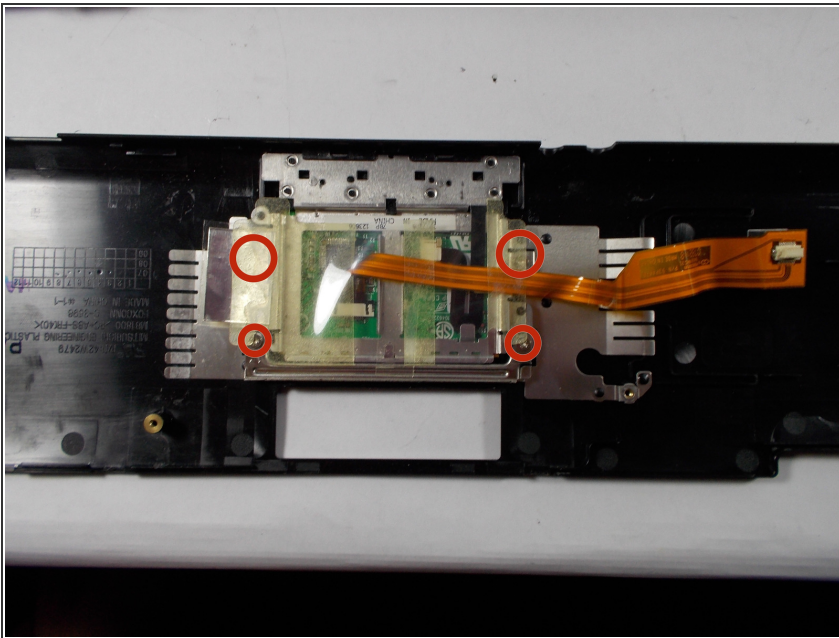

- Insert the new touchpad and replace the screws with a PH1 bit



## Step 7

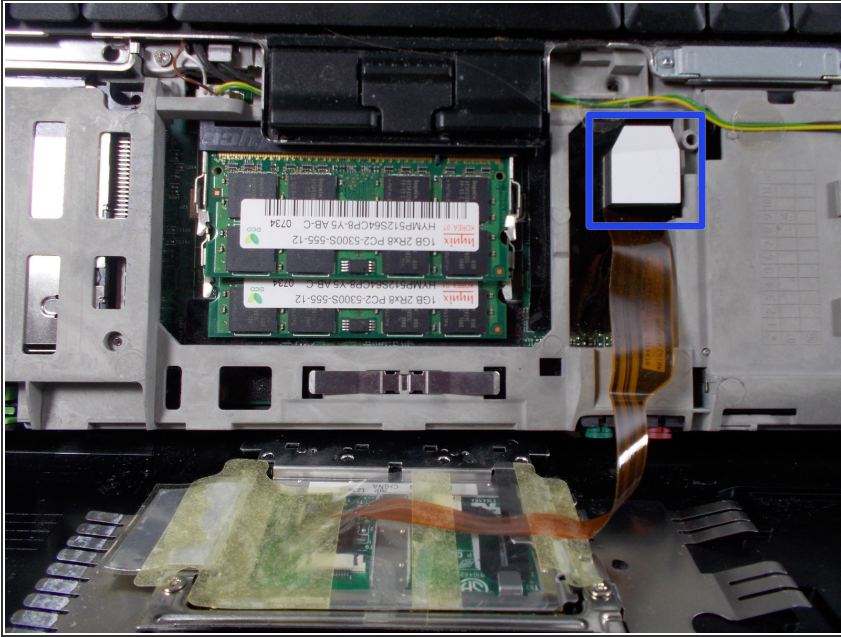

- Reinsert the plug.

## Step 8



- Re-insert the touch pad panel
- Replace the screws with a PH1 bit.

To reassemble your device, follow these instructions in reverse order.

